mipan SI

Numeric Panel-Mount LED Display with Serial Interface

User's Manual

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

mipan SI

Numeric Panel-Mount LED Display with Serial Interface

Table of Contents

1 GENERAL 3

1.1 Special Features 3

2 APPLICATIONS EXAMPLES 4

3 TECHNICAL DATA 5

3.1 Bus Termination 5

3.2 Start-Up Performance 6

3.3 Displayable Characters and Transmission Protocol 7

3.4 Error Messages 7

4 CONNECTOR PIN ASSIGNMENTS 8

4.1 Display Elements 10

5 HOUSING DIMENSIONS 11

5.1 Panel Cutout 12

5.2 Installation / Mounting 12

6 APPENDIX 13

6.1 Standard Equipment 13

6.2 Optional Accessories 13

6.3 Maintenance and Care 14

6.4 Warranty / Liability 15

6.5 Declaration of Conformity 16

6.6 Versions Overview 17

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

1 General

The numeric panel mount LED display has been designed for industrial applications.

The three different front panel sizes available for this high performance display unit, i.e. 96 x 24 mm, 96 x 48 mm and 144 x 48 mm, and an overall depth of only 60 mm allow for space saving installation.

A large operating voltage range assures reliable operation, even where voltage fluctuations might otherwise cause problems.

The device is available with the following interfaces: RS 485, RS 232 or TTY passive.

1.1 Special Features

The device is equipped with the following important functional features:

- Various interfaces
- Adaptation to existing data telegrams
- Exceptional price-efficiency ratio
- DIN panel-mount housing, metal with special surface finish.

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

2 Applications Examples

The display can be driven via three serial interfaces (RS 232, RS 485 and TTY passive).

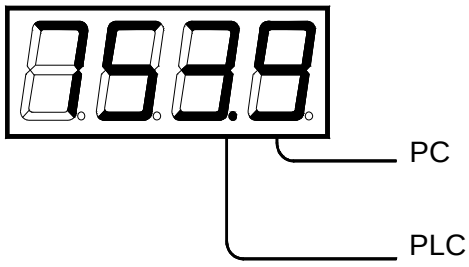

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

3 Technical Data

General Specifications		Power Consumption
Display type:	7 segment LED	
Character height:	13 mm, 20 mm or 30 mm	Character Height:
Digits:	4 or 6	13 mm: prox. 0.15 W per digit
Display colour:	red, green	20 mm: prox. 0.2 W per digit
Operating voltage:	24 VDC +/- 20 %	30 mm: prox. 0.3 W per digit
Interface:	serial bus compatible RS 485, RS 232, TTY passive	
Protocol:	ASCII	
Display:	0 1 2 3 4 5 6 7 8 9 A b C d E F o P r U	
Baud rate:	1.2, 2.4, 4.8, 9.6 kBaud	
Addresses:	01 through 99	
Parity:	even, odd, none	
Dimensional display:	upon request	
Housing:	DIN panel-mount housing, metal with special surface finish	
Housing dimensions:	see chapter 5	
Protection:	front panel: IP54 or IP65	
Mounting:	screw clamps	
Operating temp.:	0 to + 50 °C	
Storage temp.:	- 25 to + 70 °C	

3.1 Bus Termination

The device is not equipped with a bus termination. According to the specification for the RS 485 interface, an appropriate bus termination must be installed at the beginning and at the end of the bus cable.

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

3.2 Start-Up Performance

The following character sequence appears at the 6-digit display after supply power has been switched on, or after a reset

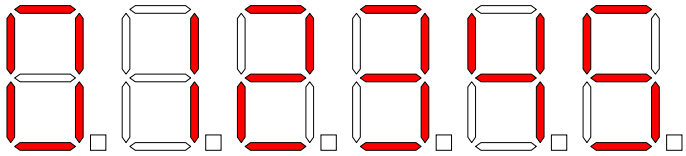

The following sequence appears at the 4-digit display:

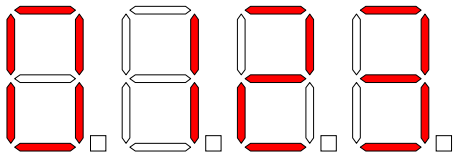

Thereafter, the selected device address appears at the 6-digit display as follows:

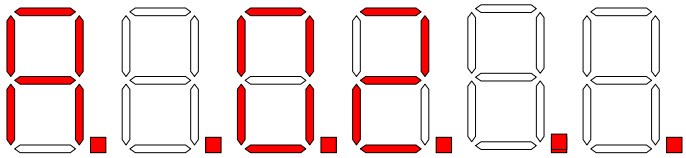

or as follows at the 4-digit display:

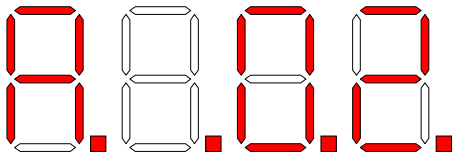

The display goes blank after approximately 2 seconds, and is then ready to receive and display data.

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

3.3 Displayable Characters and Transmission Protocol

1 start bit / 8 data bits (the highest value bit is always 0) / 1 parity bit / 1 stop bit

0 1 2 3 4 5 6 7 8 9 A b C d E F o P r U . -

STX Adr. H Adr. L P1 P2 P3 DB1...DB6 ETX

STX = start byte code 02H
ADR. H = device address, high (10^1) code 30H...39H
ADR. L = device address, low (10^0) code 30H...39H
P1 = decimal byte 1
coding: 0 1 0 X X X X X
| | | | |
| | | | decimal point at digit 5
| | | decimal point at digit 4
| | decimal point at digit 3
| decimal point at digit 2
decimal point at digit 1
P2 = decimal byte 2
coding: 0 1 0 X 0 0 0 0 0
|
decimal point at digit 6
P3 = decimal byte 3
coding: 0 1 0 0 0 0 0 0
DB1 = character for digit 1 in ASCII code
:
:
DB6 = character for digit 6 in ASCII code
ETX = end byte, code 03H

If a deviation from the prescribed protocol should occur, the entire entry is ignored.
If address 00 is broadcast, all interconnected devices are addressed simultaneously.

3.4 Error Messages

P Error: Parity error
F Error: Frame error
O Error: Overrun error

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

4 Connector Pin Assignments

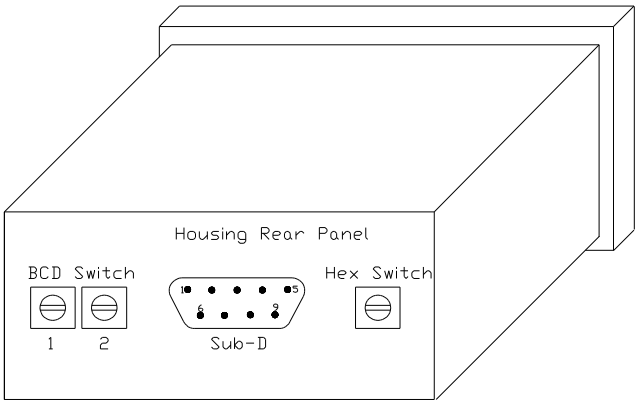

9-Pole Sub-D



PIN	RS 485 / RS 232 / TTY passive
1	+24 VDC
2	0 VDC
3	Rx+ (RS485)
4	Rx- (RS485)
5	* GND
6	RxD (RS232)
7	Data+ (TTY passive)
8	Data- (TTY passive)
9	* n.c.

* Pins 5 and 9 must be bridged for TTY interface.

BCD Switch

BCD Switch	Address
1	10^0
2	10^1

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

Hex Switch



Hex Switch	Function
0	1200 baud, parity odd
1	2400 baud, parity odd
2	4800 baud, parity odd
3	9600 baud, parity odd
4	1200 baud, parity even
5	2400 baud, parity even
6	4800 baud, parity even
7	9600 baud, parity even
8	1200 baud, no parity
9	2400 baud, no parity
A	4800 baud, no parity
B	9600 baud, no parity

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

4.1 Display Elements

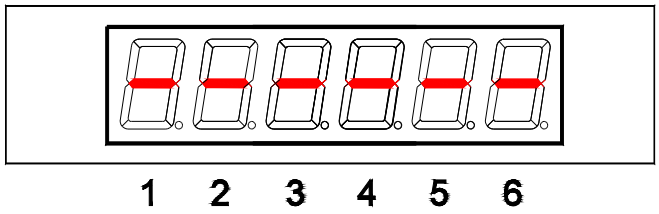

The digits are designated from left to right, as shown above.

Component	Function / Description
7 Segment Display	
Number of lines:	1
Number of characters:	4 or 6
Character height:	13, 20 or 30 mm
Version:	readable from one side
Display colour:	red or green illuminated

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

5 Housing Dimensions

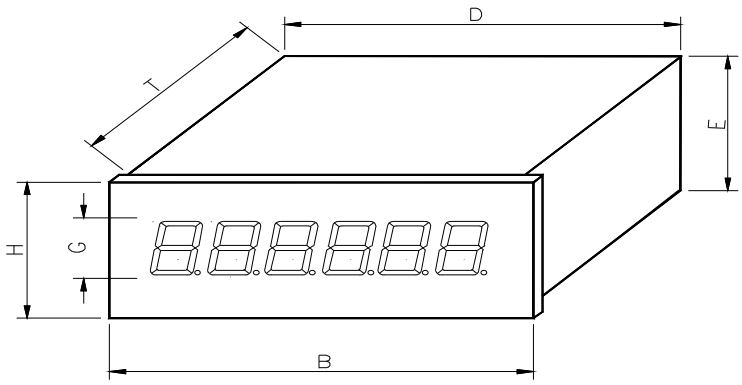

Fixed Dimensions

Dimension	T
Measurement	60

Variable Dimensions

Char. Height: G	Digits	B	H	D	E
13	6	96	24	92	20
20	4	96	48	92	44
20	6	144	48	140	44
30	4	144	48	140	44

All dimensions in mm.

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

5.1 Panel Cutout

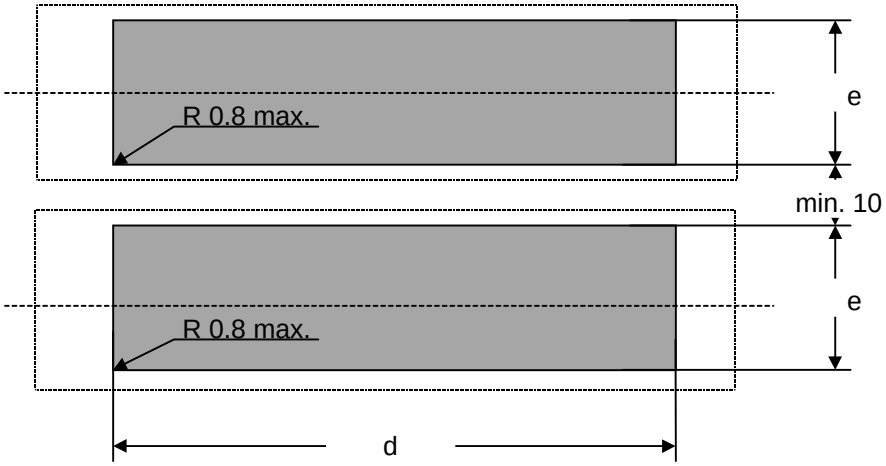

Character Height	Digits	d	e
13	6	$92,5^{+0.8}$	$22.2^{+0.3}$
20	4	$92,5^{+0.8}$	$45^{+0.6}$
20	6	141	$45^{+0.6}$
30	4	141	$45^{+0.6}$

All dimensions in mm.

5.2 Installation / Mounting

The display has been designed for mounting to a panel. The tabs provided to this end are bent up to enable fastening of the clamps after the device has been inserted.

A rubber gasket seals the device's front panel against the control panel (IP65).

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

6 Appendix

6.1 Standard Equipment

- Display with current software and hardware versions
- Mounting materials (screw clamps M2,5)
- User's manual for original purchaser.

6.2 Optional Accessories

- User's manual
- Mounting materials (screw clamps M4).

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

6.3 Maintenance and Care

Observe the following instructions in order to assure best possible performance of the display unit:

- The display must be switched off before cleaning. Only solvent-free cleaners may be used, as the surface of the housing may otherwise be damaged. Under no circumstances may moisture be allowed to enter the interior of the device during cleaning.

- Protect the display from excessive humidity, extreme vibration, direct sunlight and extreme temperatures. Non-observance may lead to malfunctioning or destruction of the device. Under certain circumstances electrical shock, fire and explosion may occur as well. Information concerning allowable ambient conditions, including recommended temperature and atmospheric humidity ranges, can be found in the chapter entitled "Technical Data".

- The display may not be placed into service if the device and/or the power cable are known to be damaged.

- Do not attempt to open or repair the device yourself. The guarantee is rendered null and void if the device is tampered with by unauthorised persons.

- Observe all of the instructions and requirements which are included in this user's manual.

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

6.4 Warranty / Liability

For the product, liability is assumed for defects, which existed at the delivery date according to our General Terms and Conditions.

Technically changes as well as errors are excepted. A claim for delivery of a new product does not exist. The buyer has to check the received product immediately and indicate evident defects at the latest 24 hours after detection. Non-observance of notification requirements is equated with acceptance of the defect. Not immediately visible defects have to be indicated immediately after their perception too.

Generally, defects and their symptoms must be described as accurately as possible in order to allow for reproducibility and elimination. The buyer must provide for access to the relevant device and all required and/or useful information at no charge and must make all of the required data and machine time available free of charge.

The guarantee does not cover defects, which result from non-observance of the prescribed conditions of use, or from improper handling.

If the device has been placed at the disposal of the buyer for test purposes and has been purchased subsequent to such testing, both parties agree that the product is to be considered “used” and that it has been purchased “as is”. No guarantee claims may be made in such cases.

The General Terms and Conditions of microSYST Systemelectronic GmbH in current version apply as well.

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

6.5 Declaration of Conformity

EG-Konformitätserklärung
Declaration of EC-Conformity

Produktbezeichnung: **mipan SI**
Product name:

Produktbeschreibung: Numerische LED-Einbauanzeige mit seriellem Interface
Product description: Numeric Panel-Mount LED Display with Serial Interface

Hersteller:
Manufacturer: microSYST Systemelectronic GmbH
Albert-Einstein-Straße 7
92637 Weiden

Das bezeichnete Produkt stimmt mit der folgenden Europäischen Richtlinie überein: We herewith confirm that the above mentioned product meets the requirements of the following standard:		**Die Übereinstimmung des bezeichneten Produktes mit den Vorschriften der Richtlinie wird nachgewiesen durch die vollständige Einhaltung folgender Normen:** The correspondence of the above mentioned product with these requirements is proved by the fact that these products meet with the following single standards:
Nummer	**Bezeichnung**	**Europäische Norm**
2004/108/EG	**Elektromagnetische Verträglichkeit (EMV)**	EN61000-6-2:2006
		EN61000-6-4:2007

Weiden, den 13.03.2013

ppa. H. Kilian

Harald Kilian

Leiter operatives Geschäft / COO
Prokurist / Authorized Signatory

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de

6.6 Versions Overview

Version	Date	Comments, Description
1.00	5/27/99	
1.10	12/13/01	Kreuzer: Layout
1.20	12/16/02	Kreuzer: New logo
1.31	8/5/03	Kreuzer: TTY -> TTY passive
1.40	9/12/03	Kreuzer: Error description
1.50	4/29/04	Kreuzer: new designations Rx+, Rx-
1.60	10/13/04	Kreuzer: Panel cutout changed
1.70	08/02/10	Order numbers deleted
1.80	06/08/11	Cover sheet
1.90	03/18/13	Declaration of conformity, warranty / liability changed
2.00	10/22/13	Logo

Certified per **DIN EN ISO 9001**.

microSYST Systemelectronic GmbH, Albert-Einstein-Straße 7, 92637 Weiden
Tel. +49 961 39166-0, Fax +49 961 39166-10, www.microsyst.de, info@microsyst.de